

PARÂMETROS DE OPERAÇÃO

1. Potência: 44x12W

2. Cor: RGBW

3. Canal: 8 CH

4. Protocólo: DMX 512

RIBALTA P5

1. Display panel operation

After startup, press MENU to switch the menu, press UP and DOWN to select the value, and then press ENTER to save. The screen saver will be automatically activated 30 seconds after no key operation. Press any key to activate.

DMX Mod	204 540	F C DMV D. 44	
Addr:001	001-512	FunctionDMX Pattern	
Channel	8СН	channel mode setting	
Jump	000-255	Color jump, the higher the value, the faster the speed.	
SP:200	000-200		
Gradient	000-255	Color gradient, the larger the value,	
SP:200		the faster the speed	
Pulse		Color pulse, the larger the value, the faster the speed.	
SP:200	000-255		
Color R	000-255	Red manual dimming, the higher the value, the higher the brightness.	
D:255			
Color G		Green manual dimming, the higher the value,	
D:255	000-255	the higher the brightness	
Color B		Blue manual dimming, the higher the value, the higher the brightness	
D:255	000-255		
Color W		White manual dimming, the higher the value, the higher the brightness	
D:255	000-255		
Color S		Manual stroboscopic adjustment, the greater the value, the greater the stroboscopic block 1-20 Hz	
H:255	000-255		

CH8 mode

СН	Number range	Function
СН1	0-255	0-100% Linear total dimming
CH2	0-4	Stroboscopic
	5-255	Strobe from slow to fast1-20Hz
СНЗ	0-50	Stroboscopic
	51-100	Color Gradient
	101-150	Color Gradient
	151-255	Color Pulse
CH4	0-255	Speed from slow to fast
CH5	0	Red off
	1-255	0-100%Linear dimming
СН6	0	Gree n off
	1-255	0-100%Linear dimming
СН7	0	Blue off
	1-255	0-100%Linear dimming
СН8	0	White off
	1-255	0-100%Linear dimming

Note: Plug in the signal line, and the lamp will automatically identify and jump to DMX mode.

2: Master-slave setting

Two or more identical lamps are connected by 3-core signal lines, and any host is set as the demonstration program.

The other machine automatically recognizes the signal and enters the slave mode.



MANUAL DO USUÁRIO